
 

Remove console from car

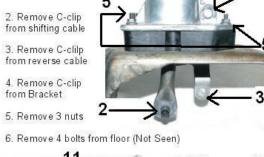

- 11. To remove shifter and black plastic, hold Aluminum housing as you push shifter
- 12. Notice slot in black plastic..
- 13. Remove black plastic from shifter.



- 8. Hold spring and slide Reverse bracket from Aluminum Housing.
- Notice position of spring.
- 10. Remove tension from spring by untwisting. Save spring.

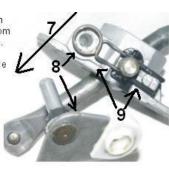

14. Slide adaptor into black plastic and insert in aluminum housing. Black plastic must be level with base of aluminum housing.



15. Lay spring over finger of adaptor and line up hole in aluminum housing



16. Twis spring upward twards top of adaptor.



- 17. Hold spring in position and slide Reverse linkage thru spring into the aluminum housing
- 18. slide assembly with Reverse linkage thru the black plastic and shifter base. Replace the 3 nuts to hold aluminum housing and tighten.
- Replace Clip # 4 to hold Reverse linkag, Clip #3 to hold Reverse cable, and Clip #2 to hold Shifting linkage.
- 20 Tighten 4 bolts that hold shifter to floor
- 21. Reinstall console